

2010 ~ 2012

**SX4**

# Maintenance Schedule

## Normal Driving Conditions



Way of Life!

Maintenance Interval	Service
12,500 km or 7.5 months	A
25,000 km or 15 months	B
37,500 km or 22.5 months	A
50,000 km or 30 months	B + C
62,500 km or 37.5 months	A
75,000 km or 45 months	B + D + E
87,500 km or 52.5 months	A
100,000 km or 60 months	B + C + F
112,500 km or 67.5 months	A
125,000 km or 75 months	B + D
137,500 km or 82.5 months	A
150,000 km or 90 months	B + C + E + G
162,500 km or 97.5 months	A
175,000 km or 105 months	B + D
187,500 km or 112.5 months	A
200,000 km or 120 months	B + C + F
212,500 km or 127.5 months	A
225,000 km or 135 months	B + D + E + G
237,500 km or 142.5 months	A
250,000 km or 150 months	B + C + H



**NOTE**

Maintenance interval based on time or mileage, whichever comes first.  
 "Inspect" denotes inspection, cleaning, adjustment, lubrication or replacement as required.

**SERVICE A**

- Inspect brake discs and pads (front, rear)
- Inspect brake drums and shoes (rear) (if equipped)
- Inspect brake hoses and pipes
- Inspect parking brake lever and cable (lever movement check, adjustment)
- Inspect tires (including tire rotation)
- Inspect wheels
- Inspect suspension system
- Inspect propeller shafts (i-AWD)/Drive axle boots
- Inspect steering system, steering wheel movement, linkage
- Inspect power steering
- Inspect all latches, hinges and locks
- Change engine oil and oil filter
- In addition to the above, inspect manual transaxle oil level, and transfer oil level (i-AWD) and change rear differential oil (i-AWD) at the 12,500 km/7.5 month maintenance interval

**SERVICE B**

- Inspect fuel tank and cap
- Inspect clutch (for manual transaxle) pedal and fluid level
- Inspect brake fluid level
- Brake pedal stroke check, adjustment
- Inspect tires (including tire rotation)
- Inspect wheels
- Inspect suspension system
- Inspect propeller shafts (i-AWD)/Drive axle boots
- Inspect continuously variable transaxle (CVT) fluid level
- Inspect steering system, steering wheel movement, linkage
- Inspect power steering
- Inspect all latches, hinges and locks
- Inspect air conditioner filter element (if equipped)
- Change engine oil and oil filter

**SERVICE C**

- Drive belt (inspect for damage)
- Inspect cooling system, hoses and connections
- Inspect exhaust pipes and mountings
- Inspect ignition coil (plug cap)
- Inspect fuel lines and connections
- Inspect manual transaxle oil level (Genuine Suzuki Gear Oil 75W-80)
- Inspect transfer oil (i-AWD)
- Inspect rear differential oil (i-AWD)
- Change engine coolant (Suzuki LLC Standard Green) (if installed)
- Replace air cleaner filter element (paved road)
- Change manual transaxle oil (other than Genuine Suzuki Gear Oil 75W-80)
- Replace air conditioner filter element (if equipped)

**SERVICE D**

- Inspect manual transaxle oil level
- Inspect transfer oil (i-AWD)
- Inspect rear differential oil (i-AWD)

**SERVICE E**

- Inspect continuously variable transaxle (CVT) fluid hose

**SERVICE F**

- Inspect valve lash (clearance)
- Inspect emission related hoses and tubes
- Replace spark plugs
- Change brake fluid
- Change transfer oil (i-AWD)

**SERVICE G**

- Change engine coolant (Suzuki Super Blue)
- In addition to the above, change manual transaxle oil (Genuine Suzuki Gear Oil 75W-80) at the 150,000 km/90 month maintenance interval

**SERVICE H**

- Inspect emission related hoses and tubes
- Replace EVAP canister
- Replace canister air suction filter
- Replace fuel filter

2010 ~ 2012

**SX4**

# Maintenance Schedule

## Severe Driving Conditions



Way of Life!

Maintenance Interval	Service
5,000 km or 3 months	A
10,000 km or 6 months	A + B + C
15,000 km or 9 months	A
20,000 km or 12 months	A + B + C
25,000 km or 15 months	A + D
30,000 km or 18 months	A + B
35,000 km or 21 months	A
40,000 km or 24 months	A + B + C
45,000 km or 27 months	A
50,000 km or 30 months	A + B + D + E
55,000 km or 33 months	A
60,000 km or 36 months	A + B + C
65,000 km or 39 months	A
70,000 km or 42 months	A + B
75,000 km or 45 months	A + D
80,000 km or 48 months	A + B + C
85,000 km or 51 months	A
90,000 km or 54 months	A + B
95,000 km or 57 months	A
100,000 km or 60 months	A + B + C + D + E + F
105,000 km or 63 months	A
110,000 km or 66 months	A + B
115,000 km or 69 months	A
120,000 km or 72 months	A + B + C
125,000 km or 75 months	A + D



**NOTE**

Maintenance interval based on time or mileage, whichever comes first.

“Inspect” denotes inspection, cleaning, adjustment, lubrication or replacement as required.

Replace Suzuki LLC Super Blue engine coolant at 150,000 km/90 months, and every 75,000 km or 45 months thereafter.

Replace EVAP canister every 250,000 km or 180 months.

Replace fuel filter every 250,000 km or 150 months.

**SERVICE A**

- Inspect air cleaner filter element (paved road)
- Change engine oil and oil filter

**SERVICE B**

- Inspect tires (including tire rotation)
- Inspect wheels
- Inspect suspension system
- Inspect propeller shafts (i-AWD)/Drive axle boots
- Inspect steering system (steering wheel movement, linkage)
- Inspect power steering
- Inspect all latches, hinges and locks
- Inspect air conditioner filter element (if equipped)

**SERVICE C**

- Inspect brake discs and pads (front, rear)
- Inspect brake drums and shoes (rear) (if equipped)
- Inspect brake hoses and pipes
- Inspect wheel bearings (not required at 10,000 km/3 months)
- In addition to the above, inspect parking brake lever and cable (lever movement check, adjustment) at the 10,000 km/6 month maintenance interval

**SERVICE D**

- Inspect cooling system hoses and connections
- Inspect exhaust pipes and mountings
- Inspect fuel tank and cap
- Inspect fuel lines and connections
- Inspect clutch (for manual transaxle) pedal and fluid level
- Brake fluid level check
- Brake pedal stroke check, adjustment
- Inspect parking brake lever and cable (lever movement check, adjustment)
- Inspect Manual transaxle oil (Genuine Suzuki Gear Oil 75W-80)
- Change Manual transaxle oil (other than Genuine Suzuki Gear Oil 75W-80)
- Inspect continuously variable transaxle (CVT) fluid level
- Continuously variable transaxle (CVT) fluid deterioration check
- Change transfer oil (i-AWD)
- Change rear differential oil (i-AWD)
- In addition to the above, change manual transaxle oil (Genuine Suzuki Gear Oil 75W-80) at the 75,000 km/45 month maintenance interval
- In addition to the above, inspect CVT fluid hose at the 75,000 km/45 month maintenance interval

**SERVICE E**

- Drive belt (inspect for damage)
- Inspect ignition coil (plug cap)
- Change engine coolant (Suzuki LLC Standard Green, if installed)
- Change air cleaner filter element (paved road)
- Change air conditioner filter element (if equipped)

**SERVICE F**

- Inspect valve lash (clearance)
- Inspect emission related hoses and tubes
- Replace spark plugs
- Change brake fluid