

2010 ~ 2013

SX4

Maintenance Schedule

Normal Driving Conditions



Maintenance Interval	Service
12,500 km or 7.5 months	A
25,000 km or 15 months	B
37,500 km or 22.5 months	A
50,000 km or 30 months	B + C
62,500 km or 37.5 months	A
75,000 km or 45 months	B + D + E
87,500 km or 52.5 months	A
100,000 km or 60 months	B + C + F
112,500 km or 67.5 months	A
125,000 km or 75 months	B + D
137,500 km or 82.5 months	A
150,000 km or 90 months	B + C + E + G
162,500 km or 97.5 months	A
175,000 km or 105 months	B + D
187,500 km or 112.5 months	A
200,000 km or 120 months	B + C + F
212,500 km or 127.5 months	A
225,000 km or 135 months	B + D + E + G
237,500 km or 142.5 months	A
250,000 km or 150 months	B + C + H

NOTE

Maintenance interval based on time or mileage, whichever comes first.
“Inspect” denotes inspection, cleaning, adjustment, lubrication or replacement as required.

SERVICE A

- Inspect brake discs and pads (front, rear)
- Inspect brake drums and shoes (rear) (if equipped)
- Inspect brake hoses and pipes
- Inspect parking brake lever and cable (lever movement check, adjustment)
- Inspect tires (including tire rotation)
- Inspect wheels
- Inspect suspension system
- Inspect propeller shafts (i-AWD)/Drive axle boots
- Inspect steering system, steering wheel movement, linkage
- Inspect power steering
- Inspect all latches, hinges and locks
- Change engine oil and oil filter
- In addition to the above, inspect manual transaxle oil level, and transfer oil level (i-AWD) and change rear differential oil (i-AWD) at the 12,500 km/7.5 month maintenance interval

SERVICE B

- Inspect fuel tank and cap
- Inspect clutch (for manual transaxle) pedal and fluid level
- Inspect brake fluid level
- Brake pedal stroke check, adjustment
- Inspect tires (including tire rotation)
- Inspect wheels
- Inspect suspension system
- Inspect propeller shafts (i-AWD)/Drive axle boots
- Inspect continuously variable transaxle (CVT) fluid level
- Inspect steering system, steering wheel movement, linkage
- Inspect power steering
- Inspect all latches, hinges and locks
- Inspect air conditioner filter element (if equipped)
- Change engine oil and oil filter

SERVICE C

- Drive belt (inspect for damage)
- Inspect cooling system, hoses and connections
- Inspect exhaust pipes and mountings
- Inspect ignition coil (plug cap)
- Inspect fuel lines and connections
- Inspect manual transaxle oil level (Genuine Suzuki Gear Oil 75W-80)
- Inspect transfer oil (i-AWD)
- Inspect rear differential oil (i-AWD)
- Change engine coolant (Suzuki LLC Standard Green) (if installed)
- Replace air cleaner filter element (paved road)
- Change manual transaxle oil (other than Genuine Suzuki Gear Oil 75W-80)
- Replace air conditioner filter element (if equipped)

SERVICE D

- Inspect manual transaxle oil level
- Inspect transfer oil (i-AWD)
- Inspect rear differential oil (i-AWD)

SERVICE E

- Inspect continuously variable transaxle (CVT) fluid hose

SERVICE F

- Inspect valve lash (clearance)
- Inspect emission related hoses and tubes
- Replace spark plugs
- Change brake fluid
- Change transfer oil (i-AWD)

SERVICE G

- Change engine coolant (Suzuki Super Blue)
- In addition to the above, change manual transaxle oil (Genuine Suzuki Gear Oil 75W-80) at the 150,000 km/90 month maintenance interval

SERVICE H

- Inspect emission related hoses and tubes
- Replace EVAP canister
- Replace canister air suction filter
- Replace fuel filter



2010 ~ 2012

SX4

Maintenance Schedule

Severe Driving Conditions



Maintenance Interval	Service
5,000 km or 3 months	A
10,000 km or 6 months	A + B + C
15,000 km or 9 months	A
20,000 km or 12 months	A + B + C
25,000 km or 15 months	A + D
30,000 km or 18 months	A + B
35,000 km or 21 months	A
40,000 km or 24 months	A + B + C
45,000 km or 27 months	A
50,000 km or 30 months	A + B + D + E
55,000 km or 33 months	A
60,000 km or 36 months	A + B + C
65,000 km or 39 months	A
70,000 km or 42 months	A + B
75,000 km or 45 months	A + D
80,000 km or 48 months	A + B + C
85,000 km or 51 months	A
90,000 km or 54 months	A + B
95,000 km or 57 months	A
100,000 km or 60 months	A + B + C + D + E + F
105,000 km or 63 months	A
110,000 km or 66 months	A + B
115,000 km or 69 months	A
120,000 km or 72 months	A + B + C
125,000 km or 75 months	A + D



NOTE

Maintenance interval based on time or mileage, whichever comes first.

“Inspect” denotes inspection, cleaning, adjustment, lubrication or replacement as required.

Replace Suzuki LLC Super Blue engine coolant at 150,000 km/90 months, and every 75,000 km or 45 months thereafter.

Replace EVAP canister every 250,000 km or 180 months.

Replace fuel filter every 250,000 km or 150 months.

SERVICE A

- Inspect air cleaner filter element (paved road)
- Change engine oil and oil filter

SERVICE B

- Inspect tires (including tire rotation)
- Inspect wheels
- Inspect suspension system
- Inspect propeller shafts (i-AWD)/Drive axle boots
- Inspect steering system (steering wheel movement, linkage)
- Inspect power steering
- Inspect all latches, hinges and locks
- Inspect air conditioner filter element (if equipped)

SERVICE C

- Inspect brake discs and pads (front, rear)
- Inspect brake drums and shoes (rear) (if equipped)
- Inspect brake hoses and pipes
- Inspect wheel bearings (not required at 10,000 km/3 months)
- In addition to the above, inspect parking brake lever and cable (lever movement check, adjustment) at the 10,000 km/6 month maintenance interval

SERVICE D

- Inspect cooling system hoses and connections
- Inspect exhaust pipes and mountings
- Inspect fuel tank and cap
- Inspect fuel lines and connections
- Inspect clutch (for manual transaxle) pedal and fluid level
- Brake fluid level check
- Brake pedal stroke check, adjustment
- Inspect parking brake lever and cable (lever movement check, adjustment)
- Inspect Manual transaxle oil (Genuine Suzuki Gear Oil 75W-80)
- Change Manual transaxle oil (other than Genuine Suzuki Gear Oil 75W-80)
- Inspect continuously variable transaxle (CVT) fluid level
- Continuously variable transaxle (CVT) fluid deterioration check
- Change transfer oil (i-AWD)
- Change rear differential oil (i-AWD)
- In addition to the above, change manual transaxle oil (Genuine Suzuki Gear Oil 75W-80) at the 75,000 km/45 month maintenance interval
- In addition to the above, inspect CVT fluid hose at the 75,000 km/45 month maintenance interval

SERVICE E

- Drive belt (inspect for damage)
- Inspect ignition coil (plug cap)
- Change engine coolant (Suzuki LLC Standard Green, if installed)
- Change air cleaner filter element (paved road)
- Change air conditioner filter element (if equipped)

SERVICE F

- Inspect valve lash (clearance)
- Inspect emission related hoses and tubes
- Replace spark plugs
- Change brake fluid